



Model Pro EX 50/2 Parts List

1 - End Housing Screw (16 req.)	EX502-001	37- Cam Housing Screw (2 req.)	EX502-037	75- Crank Arm Nut	EX502-075
2 - End Cap Housing	EX502-002	38- Cam Housing Washer (2 req.)	EX502-038	76- Lock Plate	EX502-076
3 - Dog Spring (2 req.)	EX502-003	39- End Housing	EX502-039	77- Release Arm Spring	EX502-077
4 - Spring Screw (2 req.)	EX502-004	40- Spacer (3 req.)	EX502-040	78- Spring Pin	EX502-078
4A- Washer (2 req.)	EX502-004A	41- Slide Plate	EX502-041	79- Release Arm	EX502-079
5 - End Cap Bearing	EX502-005	42- Plate Screw (3 req.)	EX502-042	80- Push Knob	EX502-080
6 - Under Dog Washer (2 req.)	EX502-006	43- Drag Arm	EX502-043	81- Crank Arm Cover	EX502-081
7 - Dog (2 req.)	EX502-007	44- Drag Knob Head	EX502-044	82- Cover Screws (2 req.)	EX502-082
8 - Harness Lap (2 req.)	EX502-008	45- Knob Slide	EX502-045	83- Crank Arm Washer	EX502-083
9 - Screws (8 req.)	EX502-009	46- Drag Button E-Clip	EX502-046	84- Handle Stem Washer (2 req.)	EX502-084
10- Body	EX502-010	47- Drag Knob Nut	EX502-047	85- Handle Stem	EX502-085
11- Limit Pin E-Clip (2 req.)	EX502-011	48- Drag Button Spring	EX502-048	86- Shoulder Bolt	EX502-086
12- Limit Pin Sleeve (2 req.)	EX502-012	49- Drag Button	EX502-049	87- Handle	EX502-087
13- Limit Pin Spring (2 req.)	EX502-013	50- Teflon Washer	EX502-050	88- Lock Screw Nut	EX502-088
14- "Full" Limit Pin	EX502-014	51- Preset Button C-Clip	EX502-051	89- Lock Screw Washer	EX502-089
15- "Free" Limit Pin	EX502-015	52- Cover Plate	EX502-052	90- Handle Lock Screw	EX502-090
16- Left Break Screw	EX502-016	52A- Plate Washer (3 req.)	EX502-052A	91- Clicker Guide Screw	EX502-091
17- L/B Lock Washer	EX502-017	53- O-Ring	EX502-053	92- Lock Washer	EX502-092
17A- L/B Washer	EX502-017A	54- Cover Plate Screw (3 req.)	EX502-054	93- Flat Washer	EX502-093
18- Left Brake	EX502-018	55- Preset Knob	EX502-055	94- Guide Pin	EX502-094
19- Brake Disc Pin E-Clip (3 req.)	EX502-019	56- Stop Nut	EX502-056	95- Pin Lock	EX502-095
20- Disc Brake	EX502-020	57- Left Washer	EX502-057	96- Clicker Guide	EX502-096
21- Brake Pin Spring (3 req.)	EX502-021	58- Low Speed Gear	EX502-058	97- Clicker Position Spring	EX502-097
22- Shaft End Pin (2 req.)	EX502-022	59- Center Washer	EX502-059	98- Clicker Position Ball	EX502-098
23- Brake Retracting Spring	EX502-023	60- High Speed Gear	EX502-060	99- Clicker Pin	EX502-099
24- Right Brake	EX502-024	61- Right Washer	EX502-061	100- Clicker Spring	EX502-100
25- Spool Bearing (2 req.)	EX502-025	62- Shaft Fork	EX502-062	101- Clicker C-Ring	EX502-101
26- Spool	EX502-026	63- Fork Spring	EX502-063	102- Clicker Spacer Washer	EX502-102
26B- Clicker Plate	EX502-026B	64- Pusher	EX502-064	103- Clicker Plastic Washer	EX502-103
27- Spool Tube	EX502-027	65- Pusher Spring	EX502-065	104- Clicker Spacer Tube	EX502-104
28- Spool Shaft With Pinion Gear	EX502-028	66- Drive Shaft	EX502-066	105- Clicker Head Pin	EX502-105
29- Belleville Washers (4 req.)	EX502-029	67- Pusher Washer	EX502-067	106- Clicker Knob	EX502-106
30- Spacer Washer	EX502-030	68- Pusher E-Clip	EX502-068	107- Rod Mount	EX502-107
31- Low Speed Pinion Gear	EX502-031	69- Drive Shaft Bearing (2 req.)	EX502-069	108- Mount Screw (4 req.)	EX502-108
32- Gear Bearing	EX502-032	70- Drive Shaft Tube	EX502-070	109- Rod Mount Bolt (2 req.)	EX502-109
33- Preset Nut	EX502-033	71- Drive Shaft Washer	EX502-071	110- Rod Mount Clamp	EX502-110
34- Male Cam	EX502-034	72- Crank Arm	EX502-072	111- Clamp Nut (2 req.)	EX502-111
35- Female Cam	EX502-035	73- Washer	EX502-073		
36- Cam Housing	EX502-036	74- Push Pin E-Clip	EX502-074		